


Timberland®





Normal position, watch runs
(↻ clockwise - to wind the watch)

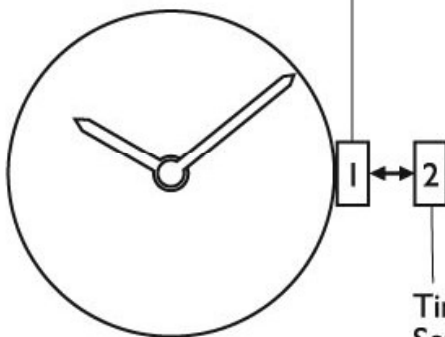

Time setting:
Set to the correct time.
Push crown back to
position 1.