


Timberland®



◆ Display

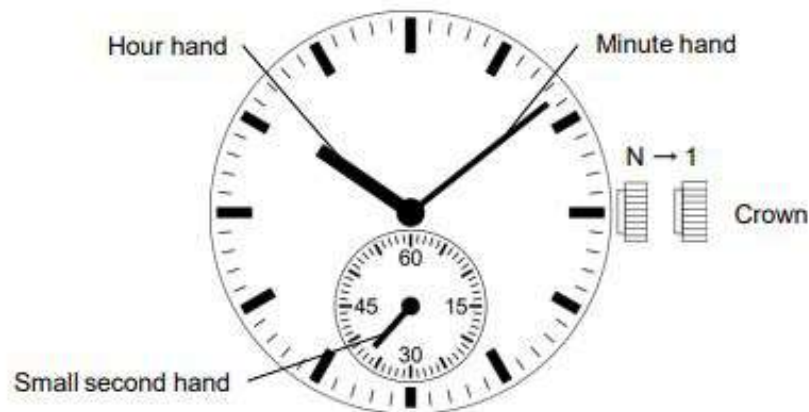

◆ Crown operation

		Crown position	
		N : normal	1 : 1st click
Crown	Free	Time setting	

◆ How to set time

- (1) Pull the crown out to the 1st click position when the small second hand is at the 12 o'clock position.
- (2) Turn the crown to set the hour and minute hands.
 - When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.
- (3) Push the crown back to the normal position.

◆ Power depletion warning function

When the battery nears its end, the small second hand moves at two-second intervals instead of the normal one-second intervals. In that case, have the battery replaced with a new one as soon as possible.

- The watch remains accurate while the small second hand is moving at two-second intervals.