


Timberland®



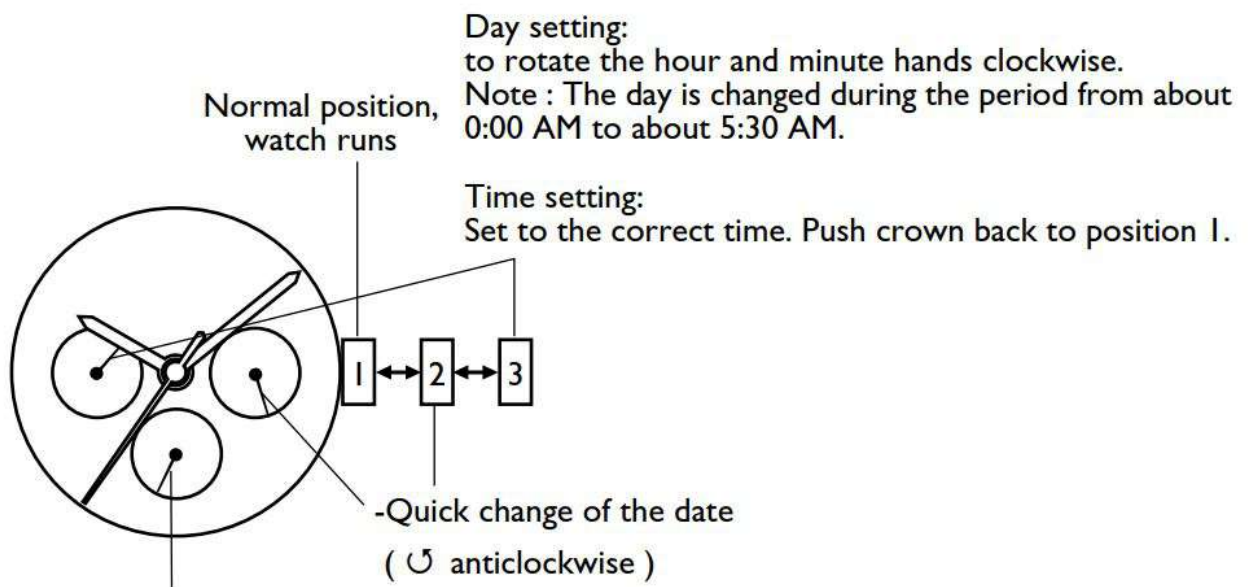

24-HOUR SUB-DIAL SETTING:

The 24-hour hand moves correspondingly with the hour and minute hands.
When setting the time be sure to check that the 24-hour hand is set properly.