




15001
INSTRUCTION MANUAL

User manual

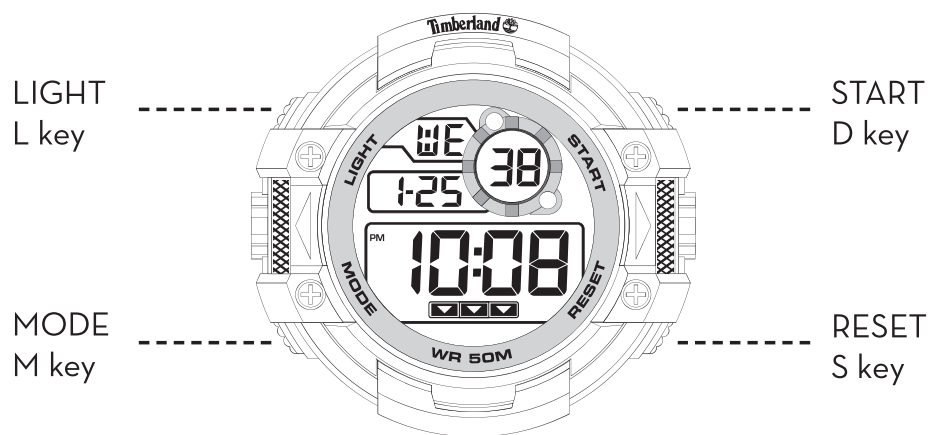

A. Basic functions

- 12 digits watch display: display hour, minute, second, week, day, month
- Daily alarm (including snooze function) and hourly chime
- 1/100 second chrono function
- Four years calendar
- Selectable 12/24-hour mode
- EL backlight

B. Function setting

- In any mode, press L key turns EL on for 3 seconds.
- In any non-setting modes, press M key to toggle different operation modes:

NORMAL TIME MODE ▶ CHRONO MODE ▶ ALARM MODE ▶ TIME SETTING MODE
and round robin.

1. Chrono and segmented time function

- In CHRONO MODE, press D key to start running seconds, and then press D key to stop running seconds. When running seconds is stopped, press S key to reset chrono to zero.
- When chrono is running, press S key to view the segmented time. Press D key to exit segmented time viewing and chrono is stopped. Press S key to display the full chrono time, and then press S key to reset chrono to zero.
- When chrono is running, press M key returns to the NORMAL TIME MODE, and the chrono is still running at background.
- The maximum recording range of a chrono is 19 hours 59 minutes 59.99 seconds.

2. Turn on and off alarm and hourly chime and alarm time setting

- In ALARM MODE (hour and minute do not flash) press D key to turn alarm on (alarm icon on), turn alarm off (alarm icon off), turn CHIME on (CHIME icon on), turn CHIME off (CHIME icon off) and round robin.
- In the ALARM MODE, press S key to set the hours (hours flash), press D to set hours. Then press S Key to switch to minutes (minutes flash), press D to set minutes. After setting is completed, press M key to return to NORMAL TIME MODE.
- When the alarm sounds, the alarm icon will flash. Press M key to stop the alarm and turn on the snooze function, After 5 minutes, the alarm will sound again; press S key or D key to stop the alarm. If there is no key operations, alarm sounds will stop automatically after 20 seconds.

3. Time setting

- In TIME SETTING MODE, “second” flash. Press D key to adjust the second to zero; press S key “hour”, “minute”, “month”, “day” and “week” will flash in turn, press D key to adjust their values. After setting is completed, press M key to return to NORMAL TIME MODE.
- During adjusting the “hour”, if second position displays “H”, it is 24-hour mode. Press D key can adjust to 12-hour mode. In 12-hour mode, if “PM” appears, it means afternoon;
- During adjusting the “second”, if the second value is between 30 and 59, minute value will increased by 1. If the second value is between 00 and 29, minute value will remain the same.
- During any setting modes, hold D key for fast increasement.